



MAINTENANCE RECOMMENDATIONS



T8 Regular Maintenance Walk-through

Directive

Regularly maintaining your Kiser Revolution is an essential part of extending your tool's longevity. It is also a remarkably simple task, so let's walk through it together!

Step-By-Step

1. Please check the air pressure of your front tires and add accordingly.
2. The mounting brackets that hold the front tire spindles to the tool are equipped with grease zerks. Please give them a pump of grease once every three months.
3. We recommend applying lithium grease to the inner jack tube once a month.
4. On the far sides of the rear-wheel assembly, industrial strength bearings allow the spindle to roll freely. Please grease those bearings once every six months.
5. The tires on the rear of your tool are solid rubber for maximum durability and desired re-compaction in your arena. Please make sure those tires are free of punctures and cracks.

- 1 Front Tire
- 2 Grease Zerks
- 3 Inner Jack Tube
- 4 Rear-wheel assembly bearings
- 5 Rear wheels

Enjoy!

We hope you continue to enjoy your Kiser Revolution! Please do not hesitate to call ABI Support at 855-211-0598 to reach one of our professional customer service representatives.

